

# RCA Television Parts

STOCK No.	DESCRIPTION	Price
<b>TELEVISION CHASSIS ASSEMBLIES</b>		
KC-4A in TRK-9 (60 cycle)	KC-4H in TRK-90 (60 cycle)	
KC-4C in TRK-9 (50 cycle)	KC-4F in TRK-120 (60 cycle)	
KC-4 in TRK-12 (60 cycle)	KC-4J in TRK-120 (50 cycle)	
KC-4B in TRK-12 (50 cycle)		
33387	Adjuster—Magnetite core and stud in tube for high frequency oscillator circuit adjustment (Used with L11, L12, L14, L15)	.55
33386	Adjuster—Magnetite core and stud in tube, for high frequency oscillator circuit adjustment (Used with L13)	.55
31253	Board—4 terminal antenna-ground terminal board	.25
12884	Capacitor—Adjustable plunger type air trimmer (C6)	.60
33097	Capacitor—4.7 mmfd. (neg. temp. coeff.) (C69)	.35
33476	Capacitor—8.2 mmfd., 500 volts (C8)	.40
33381	Capacitor—8.2 mmfd. (neg. temp. coeff.) (C71)	.40
33380	Capacitor—12 mmfd., 500 volts (C24)	.40
33100	Capacitor—18 mmfd., 500 volts (neg. temp. coeff.) (C19, C23)	.40
14021	Capacitor—22 mfd. (C50)	.35
33101	Capacitor—22 mmfd. (neg. temp. coeff.) (C64)	.40
33102	Capacitor—47 mmfd., (neg. temp. coeff.) (C30, C35, C66, C72)	.45
33103	Capacitor—48 mmfd., 500 volts (C31, C36, C15, C25, C40, C44, C49) (neg. temp. coeff.)	.35
33477	Capacitor—80.5 mmfd., 500 volts (C16)	.45
33104	Capacitor—82 mmfd. (neg. temp. coeff.) (C21, C22)	.45
33243	Coil—Oscillator coil with core and stud (L11)	.65
35582	Coil—1½ turn antenna coil, core, stud, and capacitor assembly (C5, L9, L10)	1.10
33647	Coil—2 turn antenna coil, core, stud and capacitor assembly (C4, L7, L8) (yellow or purple)	1.10
33646	Coil—3 turn antenna coil, core, stud and capacitor assembly (C3, L5, L6) (orange or white)	1.10
33645	Coil—5½ turn antenna coil, core, stud and capacitor assembly (C2, L3, L4) (red or black)	1.10
33644	Coil—4 turn antenna coil, core, stud and capacitor assembly (C137, L1, L2) (brown or blue)	1.10
33535	Coil—Peaking coil (L39, R44)	.55
33534	Coil—Peaking coil (L40, R48)	.55
33536	Coil—Peaking coil (L41, R54)	.55
33537	Coil—Peaking coil (L42, R56)	.55
33520	Coil—Peaking coil (L51, R156)	.55
33521	Coil—Peaking coil (L52, R146)	.55
33518	Coil—Peaking coil (L53, R148)	.55
33517	Coil—Peaking coil (L54, R150)	.55
33516	Coil—Peaking coil (L55, R154)	.55
33519	Coil—Peaking coil (L56, R153)	.55
33516	Coil—Peaking coil (L57, R155)	.55
33228	Condenser—Oscillator "Fine tuning" condenser, located on range switch (C9)	2.10
33164	Control—Dual 1.2 meg. and 30,000 ohms "Vertical hold" and "Horizontal hold" controls (R106, R92)	2.00
33206	Control—6 ohm tapped "Horizontal centering" control (R98)	1.50
33210	Control—20 ohm tapped "Vertical centering" control (R114)	1.50
33182	Control—4,000 ohm, "Contrast" control (R45)	1.00
33209	Control—5,800 ohm, "Vertical linearity" control (R113)	1.00
33163	Control—50,000 ohm, "Brightness" control (R61)	1.00
35566	Control—50,000 ohm "Brightness" and 4,000 ohm "Contrast" dual control (R61, R45)	2.00
33207	Control—560,000 ohm "Width" control (R94)	1.00
33208	Control—2.7 meg. "Height" control (R108)	1.00
33011	Socket—4-contact female socket for Kinescope deflecting yoke (X1)	.25
31251	Socket—8-contact octal type socket	.25
18007	Socket—Ceramic octal socket for 6L6 "Hor. out" and 6J5	.65
14278	Socket—Television output pin socket (X5)	.15
33227	Switch—Range switch, shield plate and mounting studs—less condenser and friction roller (S1, S2, S3)	4.65
33330	Transformer—1st det. P1" I-F transformer (L17, L18) (br. and br.)	2.60
33331	Transformer—1st det. P2" I-F transformer (L19, L20) (brown and red)	2.80
33334	Transformer—1st pix P1" I-F transformer (L21, L22, L23, L24) (brown and green)	2.50
33335	Transformer—1st pix P2" (L25) or "2nd pix P2" (L30) I-F transformer (brown and blue)	1.65
33338	Transformer—1st sound" I-F transformer (L45, L46) (orange and red) (Used in early production)	2.40
33526	Transformer—1st sound" I-F transformer (L45, L46) (red and white) (Used in late production)	2.50
33516	Transformer—2nd pix P1" I-F transformer (L26, L27, L28, L29) (orange and orange)	2.60
33339	Transformer—2nd sound" I-F transformer (L47, L48) (orange and orange)	2.60
33333	Transformer—"3rd pix" I-F transformer (L31, L32, L33) (orange and blue)	2.40
33336	Transformer—"4th pix" I-F transformer (L34, L35, L36) (brown and black)	2.00
33337	Transformer—"5th pix" I-F transformer (L37, L38) (brown and white)	1.80
32899	Transformer—Horizontal oscillation transformer (T1)	1.75
9862	Transformer—Horizontal output transformer (T2)	17.50
32800	Transformer—Vertical output transformer (T4)	5.50
32898	Transformer—Vertical oscillation transformer (T3)	1.75

STOCK No.	DESCRIPTION	Price
<b>7,500 VOLT TELEVISION POWER UNIT</b>		
KK-7A in TRK-9 (60 cycle)	KK-7H in TRK-90 (60 cycle)	
KK-7E in TRK-9 (50 cycle)	KK-7F in TRK-120 (60 cycle)	
KK-7 in TRK-12 (60 cycle)	KK-7J in TRK-120 (50 cycle)	
KK-7D in TRK-12 (50 cycle)		
33016	Bushing—Porcelain bushing and spring	.25
33288	Cable—Insulated connector complete with cable for Kinescope (2nd anode)	2.10
33018	Capacitor—0.03 mfd., 7,500 volt (C113, C114)	3.75
34331	Capacitor—0.1 mfd., 7,500 volt (C121, C122) (Used in 50 cycle model only)	7.50
18388	Capacitor—0.25 mfd., 600 volt (C120, C128)	.35
32400	Capacitor—20 mfd., 450 volt (C111, C112)	1.05
33023	Capacitor—80-10 mfd., 400 volt (C110, C109; C118, C119)	2.80
14854	Choke—Filter choke (L49)	1.80
32940	Choke—Filter choke (L50) (Used in TRK-9, TRK-12, TRK-120, 50 cycle)	3.75
35887	Choke—Filter choke (L50) (Used in TRK-90 and TRK-120, 60 cycle only)	4.35
30314	Clip—Plate connector for 2V3G Radiotron	.03
33037	Control—Focus control 400,000 ohms (R129) (Used in first production TRK-9, TRK-12, and in TRK-90)	1.00
33971	Control—Focus control 400,000 ohms (R129) (Used in second production TRK-9, TRK-12, and in TRK-120)	1.00
32937	Knob—Focus control knob	.20
33244	Plug—2-prong male connector for A.C. power cord (X22)	.45
33166	Plug—2-prong male plug for Kinescope grid-cathode cable (X4)	.20
35897	Resistor—60 ohms, 1 watt (R165)	.30
33501	Resistor—330,000 ohms, 1W (1,000V.) (R126, R130)	.20
33502	Resistor—470,000 ohms, 1W (1,000V.) (R127, R137, R166) (R128 in TRK-9, TRK-12, TRK-90, and TRK-120 with D.C. Restorer)	.20
33593	Resistor—560,000 ohms, 1 watt (1,000V.) (R128 in TRK-90 and TRK-120 without D.C. Restorer)	.20
33554	Resistor—820,000 ohms, 1W (1,000V.) (R131, R132, R133, R134, R135, R136)	.20
33024	Shaft—Bakelite shaft for focus control	.50
18007	Socket—Ceramic octal base socket and retaining ring for high voltage rectifier	.65
33245	Socket—Kinescope socket, less cable (X11)	.35
31251*	Socket—Octal base 5T4 or 5U4G rectifier, or television power supply socket (X13)	.26
12143	Socket—6-prong television power supply socket (X15)	.50
32909	Support—Rectifier socket, plate, and stand-off insulator assembly	2.00
32939	Transformer—Filament power transformer (T7), 105-125 volts, 50-60 cycle	5.65
32938	Transformer—Low voltage power transformer (T5), 105-125 volt, 60 cycle (Used in 60 cycle models only)	10.00
34302	Transformer—Low voltage power transformer (T8), 105-125 volts, 50 cycle (Used in 50 cycle models only)	10.00
9861	Transformer—High voltage power transformer (T6), 105-125 volts, 60 cycle (Used in 60 cycle models only)	22.50
34526	Transformer—High voltage power transformer (T9), 105-125 volts, 50 cycle (Used in TRK-	
<b>MISCELLANEOUS ASSEMBLIES</b>		
32816	Cushion—Kinescope masking cushion (TRK-12 and TRK-120 only)	2.30
33019	Cushion—Kinescope masking cushion (TRK-9 and TRK-90 only)	1.90
33074	Glass 8½ by 8½ inch safety protective glass (TRK-9 and TRK-90 only)	2.40
33076	Glass—8½ by 11½ inch safety protective glass (TRK-12 and TRK-120 only)	3.90
33282	Hinge—Piano type lid hinge and screws	2.50
33468	Knob—Radio tuning, volume or range selector knob	.15
33470	Knob—Television "Contrast," "Hor. hold" or "Fine Tuning" knob	.20
33471	Knob—Television "Brightness" or "Vert. hold" knob	.25
33472	Knob—Television "Station selector" knob	.25
33469	Knob—"Victrola-Radio-Television-Fidelity selection" knob	.20
33075	Mirror—20½ by 14½ in. viewing mirror	9.00
33362	Switch—Interlock switch with leads (TRK-9 and TRK-12)	1.80
33384	Switch—Interlock switch and cover (TRK-90 and TRK-120)	.55
31522	Support—Left hand lid support	2.25
31478	Support—Right hand lid support	2.20
9857	Yoke—Deflecting yoke complete with cable 4-prong plug (L43, L44, R62) and with mounting assembly	19.50

Other television parts for RCA 5" and G.E. receivers are available with short delay.

Send inquiries and orders to:

## ELECTRONICS SERVICE & SUPPLY